

**Confidential Information**

stage accompany Release date: 27-10-89


13 Security Functions

This Chapter contains the information about the following security functions:

- Presets-only mode adjustment
- Leveller adjustment
- Resetting the <LOCK> and <LOCK CODE>

13.1 "Presets Only Mode" Adjustment


Press numeric key "5" of the keypad for one second until the display shows:

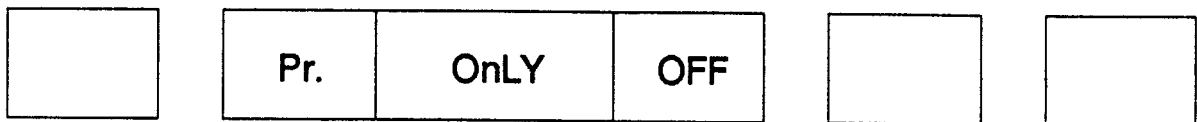

Use the <Q-FACTOR> <UP> and <DOWN> keys to switch the presets only function on or off as desired. However, to do this, you must also press both EQ IN/OUT keys at the same time as you press one of the <Q-FACTOR> keys. Press <STORE> to preserve any alternation or press <RECALL> to quit.. For a detailed description of the presets only mode, see paragraph 7.2.

13.2 Leveller Adjustment

Press numeric key "6" of the keypad for one second until the display shows:

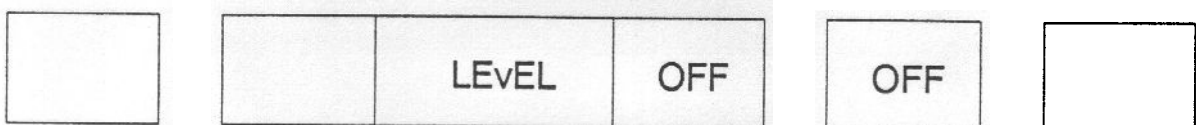

The leveller ranges from 0 dBm to +15 dBm in steps of 1 dBm. In the OFF position, the leveller does not function. The other positions show the output voltage at which the leveller will start working. When setting the function, the <OUTPUT LEVEL> display will flash to indicate that the leveller is active. Detailed information about the functioning of the leveller can be found in paragraph 7.3.

**Confidential Information**

stage accompany Release date: 27-10-89

Use the <Q-FACTOR> <UP> and <DOWN> keys to set the leveller as desired. However, to do this, you must also press both EQ IN/OUT keys at the same time as you press one of the <Q-FACTOR> keys. Press <STORE> to preserve any alternation or press <RECALL> to quit.

13.3 Resetting the <LOCK> and <LOCKCODE>

If your PPE 2410 is "locked", and you forgot the locking code, don't despair! Switch the unit off. Press keys 4 and 7 simultaneously, while switching your PPE on again. The PPE is now unlocked and the locking code set to the default value "1".

To unlock the "leveller" lock follow the above procedure but with keys 5 and 6 of the keypad
